ACCUSPLIT® EAGLE 120XL

ACTIVITY PEDOMETER

OPERATING INSTRUCTIONS

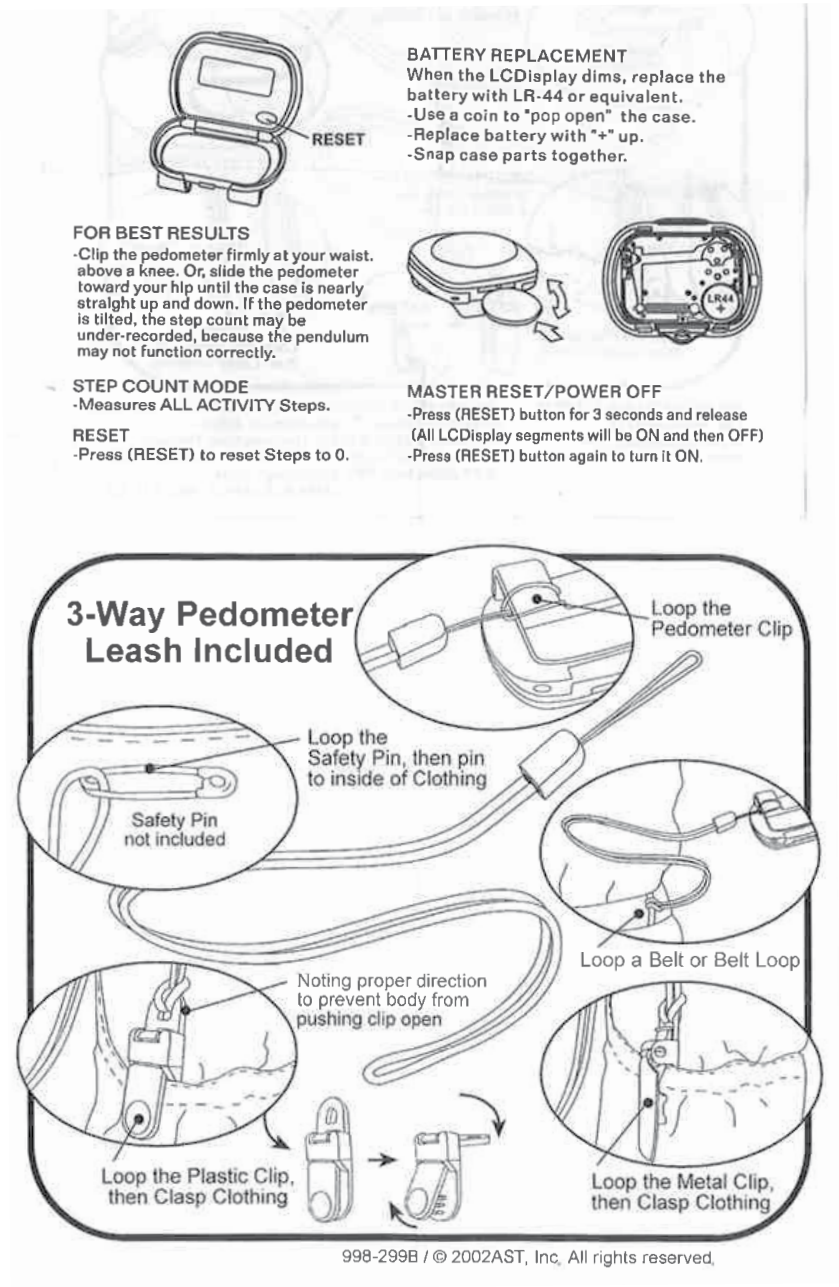
RESET
BATTERY REPLACEMENT
When the LCDisplay dims, replace the battery with LR-44 or equivalent.
-Use a coin to "pop open" the case.
-Replace battery with "+" up.
-Snap case parts together.
FOR BEST RESULTS
-Clip the pedometer firmly at your waist, above a knee. Or, slide the pedometer toward your hip until the case is nearly straight up and down. If the pedometer is tilted, the step count may be under-recorded, because the pendulum may not function correctly.
LR44
STEP COUNT MODE
-Measures ALL ACTIVITY Steps.
RESET
-Press (RESET) to reset Steps to 0.
MASTER RESET/POWER OFF
-Press (RESET) button for 3 seconds and release (All LCDisplay segments will be ON and then OFF)
-Press (RESET) button again to turn it ON.
3-Way Pedometer Leash Included
Loop the Pedometer Clip
Loop the Safety Pin, then pin to inside of Clothing
Safety Pin not included
Loop a Belt or Belt Loop
Noting proper direction to prevent body from pushing clip open
Loop the Plastic Clip, then Clasp Clothing
Loop the Metal Clip, then Clasp Clothing
998-299B / © 2002AST, Inc. All rights reserved.

Eat Right! Walk More! Live Well!
The ACCUSPLIT Lifestyle

REGISTER NOW Please return your AE120 Registration to the Repair Center address in the warranty, and we will let you know about future products.

Email (preferred) _____

User _____

_____

_____

NO-PROOF-OF-PURCHASE LIMITED WARRANTY
See label on back of unit for details, or check
http://support.ACCUSPLIT.com

ACCUSPLIT, Inc. • 3090 Independence Drive, Suite 148 • Livermore, CA 94551 USA
800-935-1996 • 925-290-1900 • FAX 925-290-1930 • www.ACCUSPLIT.com • support@ACCUSPLIT.com

Downloaded from www.Manualslib.com manuals search engine